

XX263-20-01

V9360 Indoor Network Hemispheric Camera



Vicon Industries Inc., 89 Arkay Drive, Hauppauge, New York 11788

Tel: 631-952-2288 Fax: 631-951-2288 Toll Free: 800-645-9116

24-Hour Technical Support: 800-34-VICON (800-348-4266) UK: 44/(0) 1489-566300

Vicon Industries Inc. does not warrant that the functions contained in this equipment will meet your requirements or that the operation will be entirely error free or perform precisely as described in the documentation. This system has not been designed to be used in life-critical situations and must not be used for this purpose.

www.vicon-security.com

Table of Contents

Precautions	3
--------------------	----------

1. Introduction	6
------------------------	----------

Package Contents.....	6
Features and Benefits	Error! Bookmark not defined.
Safety Instructions	Error! Bookmark not defined.
Physical Description	7

2. Accessing Camera	11
----------------------------	-----------

If you have DHCP server router in your network:	11
If you do <i>NOT</i> have DHCP server/router in your network:	11

Precautions

Read these instructions

Read all the safety and operating instructions before using this product.

Heed all warnings

Adhere to all the warnings on the product and in the instruction manual. Failure to follow the safety instruction given may directly endanger people, cause damage to the system or to other equipment.

Servicing

Do not attempt to service this video device yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Trademarks

All names used in this manual may be registered trademarks of respective companies.

Liability

Every reasonable care has been taken during the writing of this manual. Inform your local office if you find any inaccuracies or omissions. We cannot be held responsible for any typographical or technical errors and reserve the right to make changes to the product and manuals without prior notice.

FCC/CE Regulation

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the users will be required to correct the interference at their own expense.

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

Safety Instructions

Don't use the power supply with other voltages

This device is likely to be damaged or damage other equipments/personnel, if you use a power supply with different voltage than the one included with this device. All warranty of this product will be voided if this occurs.

Don't open the housing of the product

Cleaning

Disconnect this video product from the power supply before cleaning.

Attachments

Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture

Do not use this video product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool and the like.

Don't use accessories not recommended by the manufacturer

Only install this device and the power supply in a dry place protected from weather

Servicing

Do not attempt to service this video product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

Damage Requiring Service

Disconnect this video product from the power supply immediately and refer servicing to qualified service personnel under the following conditions.

- 1) When the power-supply cord or plug is damaged.
- 2) If liquid has been spilled, or objects have fallen into the video product.
- 3) If the video product has been directly exposed to rain or water.
- 4) If the video product does not operate normally by following the operating Instructions in this manual. Adjust only those controls that are covered by the instruction manual, as an improper adjustment of other controls may result in damage, and will often require extensive work by a qualified technician to restore the video product to its normal operation.

Safety Check

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine if the video product is in proper operating condition.

Caution: The black base of the camera will be hot while camera is powered on!

(Please note that this is a **NORMAL CONDITION** for this model since the base is used as a heat sink and all the camera functions will work normally!)

Caution: Do NOT install this camera directly onto any surface (wall, ceiling). One of the mounting accessories must be used, V9360-WM wall mount or V9360-FMK in-ceiling flush mount.

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

 
1. Introduction

Package Contents

V9360 H.264 4-Megapixel IP D/N Hemispheric
Camera with Advanced WDR



QIG

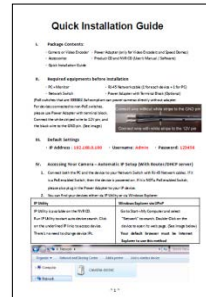

Terminal Blocks for Power, DI/O



Network Cable



 
Audio



Accessories




Drill Template

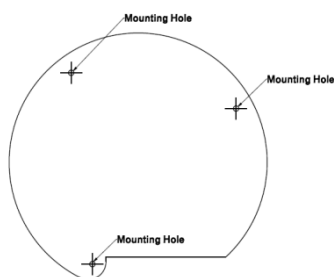

Drill Template (scale 1:1)

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

 Physical Description

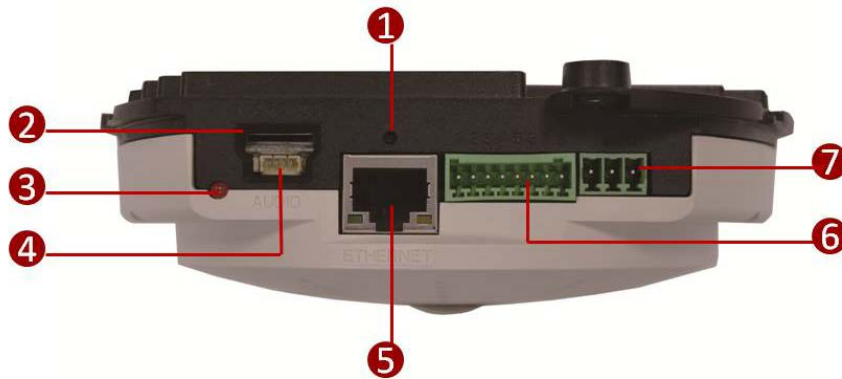

❶ Reset Button

❷ Micro SDHC Card Slot

❸ Power LED

❹ Audio Input/Output

❺ Ethernet Port

❻ Digital Input/Output

 
❼ 12 VDC Power Input

1) Reset Button

Step 1: Switch off IP device by disconnecting the power cable.

Step 2: Press and continue to hold the Reset Button (with a sharp tipped object, like a pen).

Step 3: *Reconnect the power cable while continuing to hold the Reset Button.* The red Power LED light will flash on for 3 second first, turn off for about 15 seconds, flash on for another second and turn off again. By this time the reset to default operation is already completed. ***This will take about 20 seconds from power up*** (this length of time fluctuates slightly with the environment). You may then release the Reset Button. The Power LED light will come back on and stay on after a few more seconds. The unit will start up with factory default settings automatically.

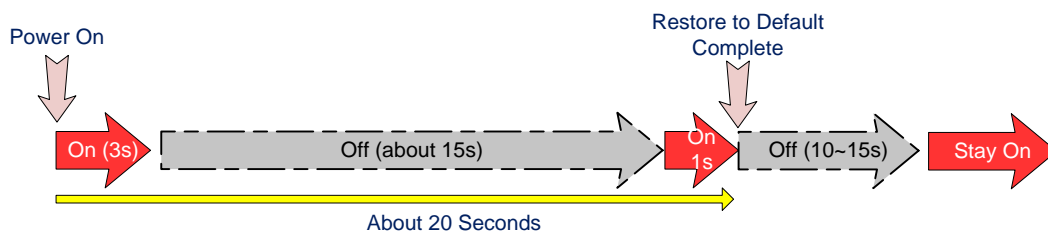

V9360 Hemispheric Camera with Advanced WDR

Hardware User's Manual

2) Micro SDHC Card Slot*

Insert a Micro SDHC card (*customer supplied) for local recording on camera.

3) Power LED

This LED light will indicate current camera status.

4) Audio Input/Output (Indoor unit only)

The IP device supports audio input and output via terminal block

	Audio terminal block	
	Red	Green
Audio In/Out	Audio In	Audio Out



5) Ethernet Port

The IP device connects to the Ethernet via a standard RJ-45 connector. Supporting NWay, this IP device can auto detect the speed of local network segment (10Base-T/100Base-TX Ethernet).

6) Digital Input/Output

Used in applications like motion detection, event triggering, time lapse recording, alarm notifications, etc., the I/O terminal connector provides the interface to:

- **Digital Output (2)** - For connecting external devices such as relays and LEDs. Connected devices can be activated by Output buttons on the Live View page or through video management software. Connect Pin 2 with Pin 4 or Pin 6 with Pin 8.
- **Digital Input (2)**- An alarm input for connecting devices that can toggle between an open and closed circuit, for example: PIRs, door/window contacts, glass break detectors, etc. The device will detect the change in digital input and transmit the signal to video surveillance servers.



Digital Input/Output Connector

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

Pin 1	GND	Ground. Connect with Pin 3 for DI control loop.	
Pin 2	12 V	Provides power to external devices with a maximum current of 100 mA.	Voltage: 12 VDC, Max: 1.2 W
Pin 3	Digital Input 1	Connect to GND (Pin 1) to activate or leave floating (unconnected) to deactivate.	Must not be exposed to voltages greater than 30 VDC.
Pin 4	Digital Output 1	Connect to Pin 2 through external devices for DO loop. If used with an external relay, a diode must be connected in parallel with the load for protection against transient voltages.	Max load = <100 mA Max voltage = 24 VDC (to the transistor)
Pin 5	GND	Ground. Connect with Pin 7 for DI control loop.	
Pin 6	12 V	Provides power to external devices with a maximum current of 100 mA.	Voltage: 12 VDC, Max: 1.2 W
Pin 7	Digital Input 2	Connect to GND (Pin 5) to activate or leave floating (unconnected) to deactivate.	Must not be exposed to voltages greater than 30 VDC.
Pin 8	Digital Output 2	Connect to Pin 6 through external devices for DO loop. If used with an external relay, a diode must be connected in parallel with the load for protection against transient voltages.	Max load = <100 mA Max voltage = 24 VDC (to the transistor)

Connect input/output devices to the camera as follows:

1. Attach the cables for the device securely to the supplied green connector block.
2. Once cables are connected, push connector block into the terminal connector on camera.

7) 12 VDC Power Input

Connect DC power source to the terminal block. The wire with white dashed lines is the live wire, which should connect to the 12V pin.



PIN	NAME	DESCRIPTION
1	E-Ground	Chassis Ground
2	GND	DC Power Input
3	12 V	



Once cables are connected, push the terminal block into the 12 VDC power input terminal connector of the camera.



V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

Using the Mounting Options

V9360-WM Wall Mount

If it is required to mount the V9360 to a wall, use the V9360-WM. Typical mounting hardware is provided; be sure to use mounting hardware appropriate for the mounting surface.

1. A mounting template is provided with the wall mount. Mark the mounting holes on the surface and drill mounting holes. Mount the flat side of the V9360-WM to the wall, with the wide end (with the cable hole) at the top, using appropriate hardware for the surface; be sure to use anchors as needed. Cables can be routed through the back slot or through the access hole.
2. Remove the camera cover if not already done. Align the three (3) holes on the bottom of the V9360 with the mounting posts of the V9360-WM. Secure with the screws provided. Reattach the cover.

V9360-FMK Wall Mount

If it is required to mount the V9360 flush in the ceiling, the V9360-FMK is required.

1. Carefully snap the trim ring off of the in-ceiling mounting assembly.
2. Using the template provided, cut a hole in the ceiling for the V9360-FMK.
3. Lift the in-ceiling mount assembly up through the ceiling hole so that the mounting lips rest on the ceiling. Tighten the flipper screws until the mounting assembly is securely in place. Holes are provided in the lip if additional support is required.
4. Remove the camera cover. Align the three (3) mounting holes on the bottom of the camera with the mounting posts on the mounting assembly. Secure the camera with the screws provided.
5. Snap the trim ring back onto the mounting assembly.

 
2. Accessing Camera

If you have DHCP server router in your network:

Many network server/routers are able to automatically provide IP addresses through DHCP. If you have DHCP on the network, just plug in your computer and IP Hemispheric Camera into the network and your IP device will acquire a network address by itself. Find and access the device with the IP Utility program.

If you do **NOT** have DHCP server/router in your network:

1. Configure your PC to use the same subnet by changing your PC's IP address to the subnet with prefix 192.168.0.XXX. The last number should be anything from 1 to 254 except 100 or other used IP addresses. Subnet mask should be 255.255.255.0.
2. The default IP used by this device is 192.168.0.100. Make sure your PC is NOT using this address and that no two devices use the same IP address in the network.
3. Change your IP address by going to Control Panel ->Manage Network Connections -> Right click on the connection to change -> Option -> TCP/IP IPv4 Properties.

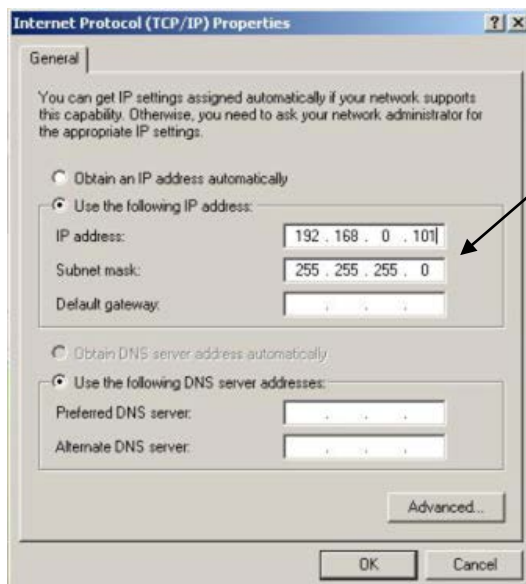

Enter the settings as below.

- IP address: 192.168. 0.xxx
- Subnet mask: 255.255.255.0


NOTE: xxx should be a number from 1 to 254 except 100, which is used by the IP device. Make sure that no two devices use the same IP address in the same network.

4. Open Internet Explorer (Version 8.0 or above) and type in the Default IP:
192.168.0.100

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual


5. When the login window displays, input default user and password:

Default User: Admin Password: 123456

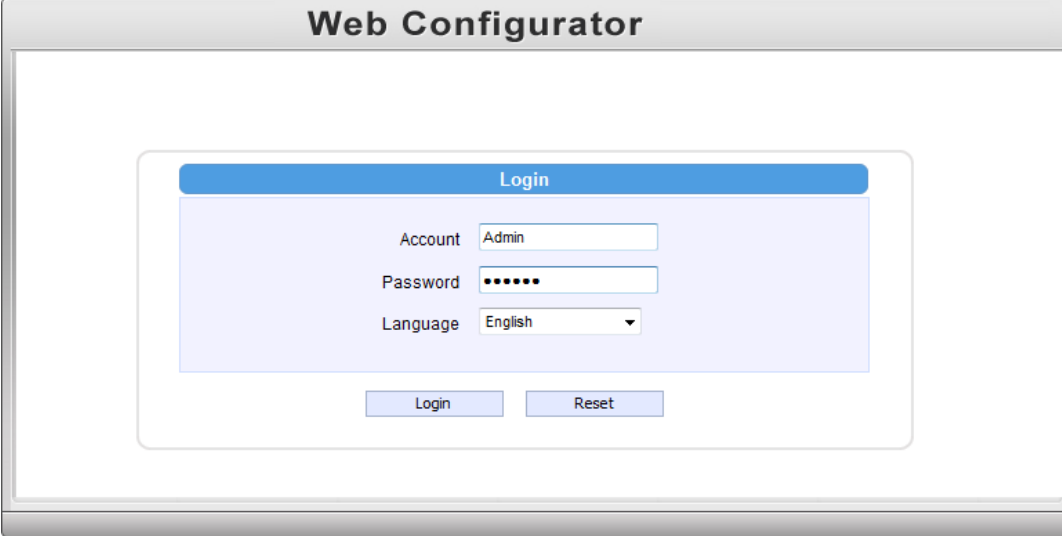

The image shows a web browser window titled "Web Configurator". Inside the window is a "Login" form. The form has a blue header bar with the word "Login" in white. Below the header, there are three input fields: "Account" with the text "Admin", "Password" with masked characters "*****", and "Language" with a dropdown menu showing "English". At the bottom of the form are two buttons: "Login" and "Reset".

 6. After logging in, the Live View will display. To go to the main menu, click the "Setup" button on the top left.

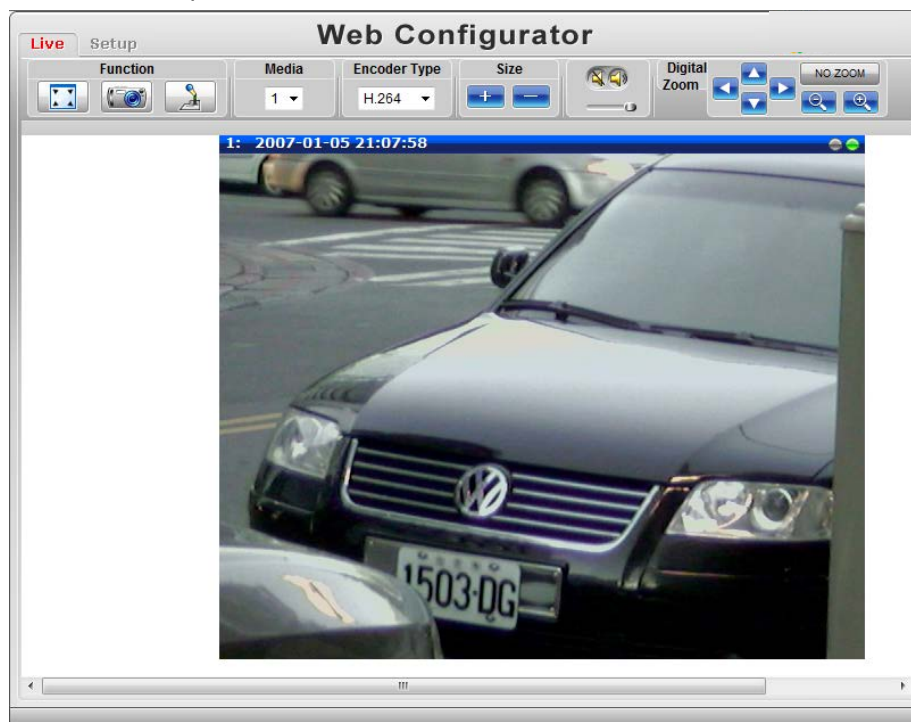

If there is only a single camera, the procedure is complete to access the device.

If there are multiple devices in the system, you need to change the current device to another unused IP address, so that when the next device is connected to the network, no two devices use the same IP. Perform the following steps.

V9360 Hemispheric Camera with Advanced WDR Hardware User's Manual

7. From the Setup Page, select IP Settings -> Connection Type.
8. Change the IP mode to Static.
9. Change the IP to 192.168.0.102 or any other unused IPs. Do NOT use the PC's IP address or 192.168.0.100. If this is not the first device being added to the network, avoid other devices' IPs.

The screenshot shows the 'Web Configurator' interface. On the left is a sidebar menu with options: Host, Date & Time, Network, IP Settings (selected), Connection Type (highlighted), DNS, DDNS, Video & Audio, Event, System, and Logout. The main content area is titled 'Connection Type*'. It contains three radio button options: 'Dynamic IP Address' (unselected), 'Static IP Address' (selected), and 'PPPoE' (unselected). Under 'Dynamic IP Address', there is a checkbox for 'Use host name' and an empty text field. Under 'Static IP Address', there are four input fields for IP Address (192, 168, 0, 102), Subnet Mask (255, 255, 255, 0), and Gateway (192, 168, 0, 254). Under 'PPPoE', there are input fields for 'User Name' and 'Password'. At the bottom of the main area are 'Apply' and 'Reset' buttons.

10. Click Apply.
11. Go to System -> Save & Reboot, and click Apply. Internet Explorer will close after a few seconds. This is normal.

The screenshot shows the 'Web Configurator' interface with the 'System' menu item selected in the sidebar. The 'System' submenu is open, showing options: User Account, System Info, Factory Default, Firmware Upload, Save & Reboot (highlighted), and Logout. The main content area displays a 'Reboot' dialog box with the following text: 'Click apply to save all settings and reboot this device. Please wait 30 seconds for system reboot. And the window will close in 3 seconds.' There is an 'Apply' button at the bottom of the dialog box.

12. Wait 30 seconds and open Internet Explorer again to connect to the new IP (in this example, 192.168.0.102). For the second device or more being added into the network, enter the correct IP.
13. Adjust the default Video setting by going to Video & Audio -> Compression

Shipping Instructions

Use the following procedure when returning a unit to the factory:

1. Call or write Vicon for a Return Authorization (R.A.) at one of the locations listed below. Record the name of the Vicon employee who issued the R.A.

Vicon Industries Inc.
89 Arkay Drive
Hauppauge, NY 11788
Phone: 631-952-2288; Toll-Free: 1-800-645-9116; Fax: 631-951-2288

For service or returns from countries in Europe, contact:

Vicon Industries (U.K.) Ltd
Brunel Way
Fareham, PO15 5TX
United Kingdom
Phone: +44 (0)1489/566300; Fax: +44 (0)1489/566322

2. Attach a sheet of paper to the unit with the following information:
 - a. Name and address of the company returning the unit
 - b. Name of the Vicon employee who issued the R.A.
 - c. R. A. number
 - d. Brief description of the installation
 - e. Complete description of the problem and circumstances under which it occurs
 - f. Unit's original date of purchase, if still under warranty
3. Pack the unit carefully. Use the original shipping carton or its equivalent for maximum protection.
4. Mark the R.A. number on the outside of the carton on the shipping label.

Vicon Standard Equipment Warranty

Vicon Industries Inc. (the "Company") warrants your equipment to be free from defects in material and workmanship under Normal Use from the date of original retail purchase for a period of three years, with the following exceptions:

1. Monitors, all models: One year from date of original retail purchase.
2. Uninterruptible Power Supplies: Two years from date of original retail purchase.
3. VDR-700 Recorder Series: One year from date of original retail purchase.
4. V5616MUX: One year from date of original retail purchase.
5. Arecont Cameras: One year from date of original retail purchase.
6. FMC series fiber-optic media converters and associated accessories: Lifetime warranty.
7. For PTZ cameras, "Normal Use" excludes prolonged use of lens and pan-and-tilt motors, gear heads, and gears due to continuous use of "autopan" or "tour" modes of operation. Such continuous operation is outside the scope of this warranty.
8. Any product sold as "special" or not listed in Vicon's commercial price list: One year from date of original retail purchase.

Date of retail purchase is the date original end-user takes possession of the equipment, or, at the sole discretion of the Company, the date the equipment first becomes operational by the original end-user.

The sole remedy under this Warranty is that defective equipment be repaired or (at the Company's option) replaced, at Company repair centers, provided the equipment has been authorized for return by the Company, and the return shipment is prepaid in accordance with policy.

The Company will not be obligated to repair or replace equipment showing abuse or damage, or to parts which in the judgment of the Company are not defective, or any equipment which may have been tampered with, altered, misused, or been subject to unauthorized repair.

Software supplied either separately or in hardware is furnished on an "As Is" basis. Vicon does not warrant that such software shall be error (bug) free. Software support via telephone, if provided at no cost, may be discontinued at any time without notice at Vicon's sole discretion. Vicon reserves the right to make changes to its software in any of its products at any time and without notice.

This Warranty is in lieu of all other conditions and warranties express or implied as to the Goods, including any warranty of merchantability or fitness and the remedy specified in this Warranty is in lieu of all other remedies available to the Purchaser.

No one is authorized to assume any liability on behalf of the Company, or impose any obligations on it in connection with the sale of any Goods, other than that which is specified above. In no event will the Company be liable for indirect, special, incidental, consequential, or other damages, whether arising from interrupted equipment operation, loss of data, replacement of equipment or software, costs or repairs undertaken by the Purchaser, or other causes.

This warranty applies to all sales made by the Company or its dealers and shall be governed by the laws of New York State without regard to its conflict of laws principles. This Warranty shall be enforceable against the Company only in the courts located in the State of New York.

The form of this Warranty is effective May 4, 2012.

THE TERMS OF THIS WARRANTY APPLY ONLY TO SALES MADE WHILE THIS WARRANTY IS IN EFFECT. THIS WARRANTY SHALL BE OF NO EFFECT IF AT THE TIME OF SALE A DIFFERENT WARRANTY IS POSTED ON THE COMPANY'S WEBSITE, WWW.VICON-SECURITY.COM. IN THAT EVENT, THE TERMS OF THE POSTED WARRANTY SHALL APPLY EXCLUSIVELY.

Vicon Industries Inc.

Corporate Headquarters

89 Arkay Drive
Hauppauge, New York 11788
631-952-2288 800-645-9116
Fax: 631-951-2288

Vicon Europe Headquarters

Brunel Way
Fareham, PO15 5TX
United Kingdom
+44 (0) 1489 566300
Fax: +44 (0) 1489 566322

Vicon Germany

Kornstieg 3
D-24537 Neumuenster
Phone: +49 (0) 4321 8790
Fax: +49 (0) 4321 879 97

Far East Office

Unit 5, 17/F, Metropole Square
2 On Yiu Street, Shatin
New Territories,
Hong Kong
(852) 2145-7118
Fax: (852) 2145-7117

Internet Address: www.vicon-security.com

